

The Magellan Group, Ltd.





Worldwide Resources

CROWN MOULDING SHELF

IMPORTANT: We recommend that this shelf be installed into wall studs and have included the wood screws to do so. If you wish to install the shelf into a hollow wall or drywall, you can purchase molly bolts or hollow wall anchors at a hardware store.



- (1) There are two wood installation blocks included with the shelf. The shelf has a groove on the under side that fits over the lip of each installation block. Determine the desired location of the shelf, then using a level, make a light pencil mark where the top of each installation block will be attached to the wall over the studs. Space the blocks far enough apart that the shelf will be well supported at each end.
- (2) Using a 1/8" drill bit, mark the drill holes by pushing the bit through the screw holes on each installation block so the bit makes a dent or mark on the wall.
- (3) Drill the holes, then install the installation blocks using the screws provided.
- (4) Set the shelf snugly over the installation blocks. For added stability, a small finishing nail may be tapped down through the top of the shelf into each of the installation blocks.

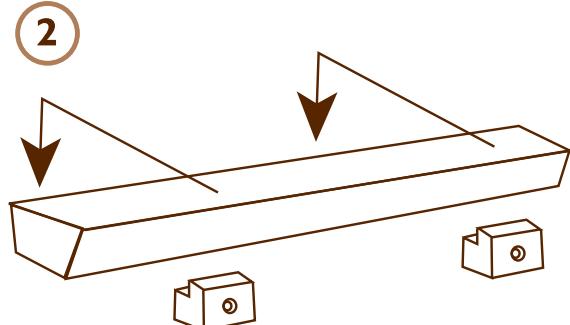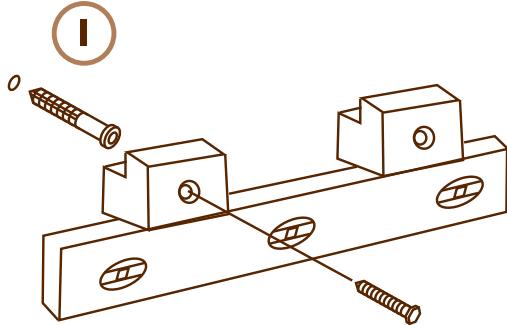



REPISA CON MOLDURA DE CORONA

IMPORTANTE: Nosotros recomendamos que esta repisa sea instalada donde se encuentran los soportes de su pared, hemos incluido los tornillos para madera por la misma razón, si su deseo es instalar la repisa en una parte de su pared que no tiene soportes, usted puede comprar tornillos especiales en la ferretería.



- (1) Con esta repisa vienen dos bloques de madera para la instalación, la repisa tiene un canal en la parte trasera para quedar montada en los bloques de madera. Luego que determine el lugar de la repisa, use un nivel y con un lápiz marque una linea la cual será guia para poner los bloques, asegurese que los bloques queden separados para que la repisa tenga soporte en la orillas.
- (2) Usando una broca de 1/8" meta la broca atraves del abujero que tiene el bloque y lentamente marque los abujeros en la pared.
- (3) Haga los abujeros completamente usando los tornillos que vienen incluidos, e instale los bloques.
- (4) Ponga la repisa sobre los bloques, para más estabilidad puede usar un clave chico clavandolo en la parte de arriba de la repisa para penetrar cada bloque de madera.

